



BlindsandCurtainsonline

Ultrawood Blind Installation Guide – Inside Fit option

Parts

1. Installation bracket x 2 (Same bracket used for inside and face fitting)
2. Installation Screw (1 per bracket, Square head)

Bracket positioning

We will supply you two installation brackets and one centre support with screws.

Note: A centre support bracket positioned in the middle of the blind will only be supplied if the blind is over 1800mm wide

The installation brackets go at either end of the blind and are marked with an L (left) and R (right)

The bracket will always be positioned as in Figure 1

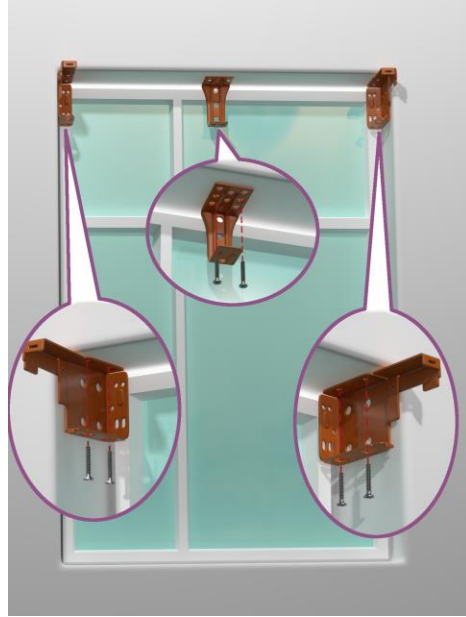


Figure 1

Step 1

Inside mounting

The left and right side brackets should be positioned at either side of the window frame as shown in Figure 3

Position them so that the front of the bracket is in line with the front of the window frame.

Screw through the bracket either upwards as shown in Figure 3 or you can through the side of the bracket which is often easier. You will be supplied 2 screws per bracket, if fixing the bracket into the side of the window frame you will see there is 4 holes that the screws can go in, position the screws diagonally for best fixing.



Figure 3

Step 2

Installing the blind

Open up the front of the bracket

Lower the slats slightly by pulling on the cords, (this is done so the slats don't get caught in the bracket when pushing the headrail into position).

Slide the headrail in the brackets from the front as shown in Figure 4

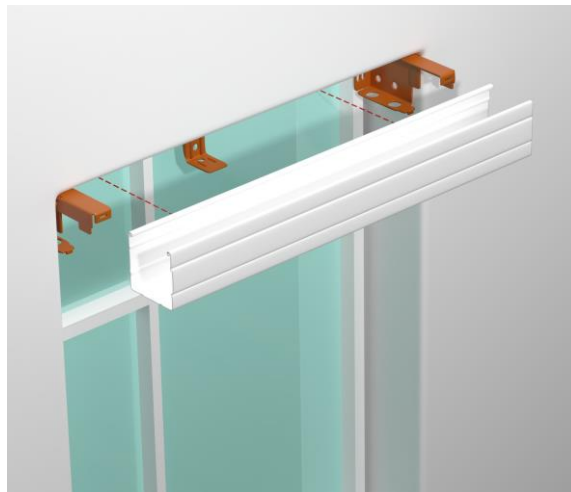


Figure 4

Once the headrail is fully in the brackets lower the front flap of the bracket and secure asw shown in Figure 5



Figure 5

Step 3

Fitting the Fascia

We will supply you with a piece of timber fascia to go across the front of the headrail.

On the headrail is some squares of Dual lock tape (similar to velcro) remove the protective film off the front of the Dual lock tape.

Hold the fascia up in the correct position and push the timber fascia against the face of the self adhesive Dual lock tape.

The fascia will remain in place. If it is no in the correct position simply remove it and then reposition it.

Removing the Blind

To remove the blind, simply remove the fascia lift the front flap and slide the blind out of the bracket

Ultrawood Blind Installation Guide – Face Fit option

Parts

1. Installation bracket x 2 (Same bracket used for inside and face fitting)
2. Installation Screw (1 per bracket, Square head)
3. One piece of timber fascia

Bracket positioning

We will supply you two installation brackets and one centre support with screws.

Note: A centre support bracket positioned in the middle of the blind will only be supplied if the blind is over 1800mm wide

The installation brackets go on the wall at either end of the blind and are marked with an L (left) and R (right)

The bracket will always be positioned as in Figure 1



Figure 1

Step 1

Facefit mounting

The left and right side brackets should be positioned at either side of the window frame as shown in Figure 3

Make sure they are the correct distance apart so that the blind will fit between them, (often it is easier to put one bracket up, hold the blind in the bracket and mark the position of the second bracket)

Screw through the back of the bracket as shown in Figure 3

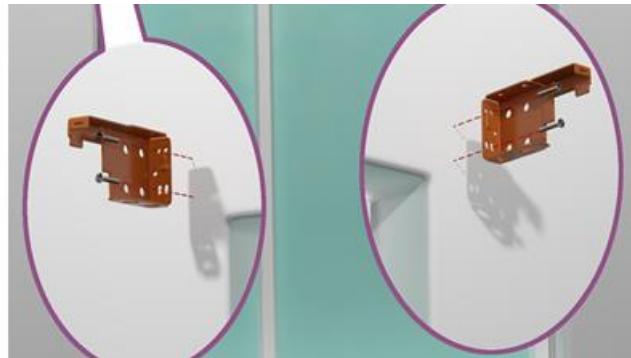


Figure 3

Step 2

Installing the blind

Open up the front of the bracket

Lower the slats slightly by pulling on the cords, (this is done so the slats don't get caught in the bracket when pushing the headrail into position).

Slide the headrail in the brackets from the front as shown in Figure 4

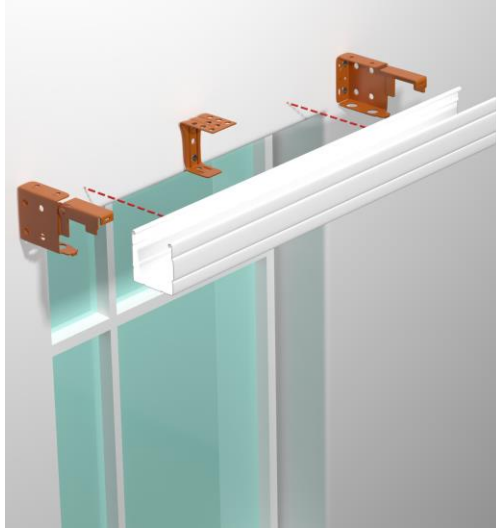


Figure 4

Once the headrail is fully in the brackets lower the front flap of the bracket and secure asw shown in Figure 5



Figure 5

Step 3

Fitting the Fascia

We will supply you with a piece of timber fascia to go across the front of the headrail.

On the headrail is some squares of Dual lock tape (similar to velcro) remove the protective film off the front of the Dual lock tape.

Hold the fascia up in the correct position and push the timber fascia against the face of the self adhesive Dual lock tape.

The fascia will remain in place. If it is not in the correct position simply remove it and then reposition it.

Removing the Blind

To remove the blind, simply remove the fascia lift the front flap and slide the blind out of the bracket