



Blinds and Curtains online

Venetian Blind 25mm Installation Guide – Inside Fit option

Parts

1. Installation bracket (Same bracket used for inside and face fitting)
2. Installation Screw (1 per bracket, Square head)

Step 1

Bracket positioning

- The amount of brackets supplied is relative to the width of the blind.
- The brackets should be spaced out evenly across the width of the window with one bracket being fixed close to the control wand and cords.
- **Note:** Do not fix bracket directly above the ladder string that hangs down from the top of blind supporting the slats, as it will be very difficult to get the blind in the bracket
- Hold your blind in the window where it will be installed and mark on the window frame where the brackets should be positioned (ideally not over the ladder tape but close to it)
- Screw brackets in position making sure they are in line across the window (Fig 1)



Fig 1



Fig 1



Fig 1



Fig 2



Fig 2

Make sure all brackets are level and evenly spaced across the face of the window.
(Figure 2)

Step 2

Installing the blind

- Hold the blind up at the window face and lower the slats slightly using the control cord so they do not get caught in the installation bracket when you fit the blind
- The head rail has an aluminum lip on the bottom of it at the rear of the head rail, this lip will be fitted into the bottom of the bracket first.



- Once the bottom lip of the blind is in place tilt the head rail back toward the bracket.
- Push firmly on the top of the head rail and the top of the installation bracket will clip over the front of it and you will hear a click as it locates itself correctly.



Removing the Blind

- To remove the blind, simply push the tab of the bracket at the top front of the head rail upward and this will release the bracket. You may need to use a flat head screw driver to do this, so be careful not to scratch the powder coated surface of the head rail.
- Once the top of the bracket is released tilt the blind forward away from the window and lift out of the bottom of the bracket.

Venetian Blind 25mm Installation Guide – Face Fit option

Parts

1. Installation bracket (Same bracket used for inside and face fitting)
2. Installation Screw (1 per bracket, Square head)

Step 1

Bracket positioning

The amount of brackets supplied are relative to the width of the blind.

The brackets should be spaced out evenly across the width of the window with one bracket being fixed close to the control wand and cords.

Note: Do not fix bracket directly above the ladder string that hangs down from the top of blind supporting the slats, as it will be very difficult to get the blind in the bracket

Hold your blind in the window where it will be installed and mark on the window frame where the brackets should be positioned (ideally not over the ladder tape but close to it)

The bracket will always be positioned as in Figure 1 whether inside or face mounting the blind

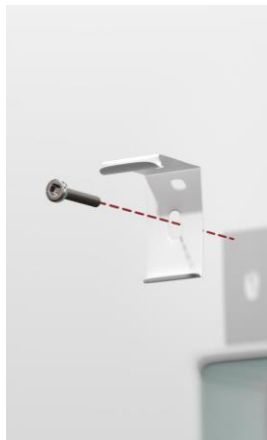


Figure 1

Step 2

Face mounting

Hold the bracket against the face of the window frame with the top edge of the bracket aligned with the upper position you have measured from.

Screw through the front of the bracket into the face of the window frame as in Figure 3



Make sure all brackets are level and evenly spaced across the face of the window.

Step 3


Installing the blind

Hold the blind up at the window face and lower the slats slightly using the control cord so they do not get caught in the installation bracket when you fit the blind

The head rail has an aluminum lip on the bottom of it at the rear of the head rail, this lip will be fitted into the bottom of the bracket first.

Once the bottom lip of the blind is in place tilt the head rail back toward the bracket.

Push firmly on the top of the head rail and the top of the installation bracket will clip over the front of it and you will hear a click as it locates itself correctly.

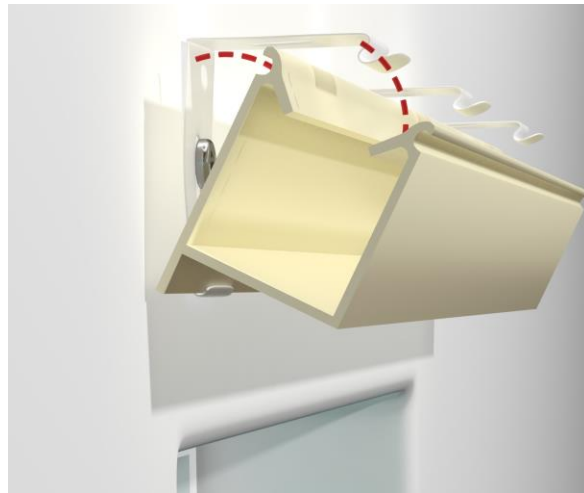

Removing the Blind

To remove the blind, simply push the tab of the bracket at the top front of the head rail upward and this will release the bracket. You may need to use a flat head screw driver to do this, so be careful not to scratch the powder coated surface of the head rail.

Once the top of the bracket is released tilt the blind forward away from the window and lift out of the bottom of the bracket.